 




T9427USB



## MIDI LED INSPECTION LIGHT



**400**  
lumens

COB TECHNOLOGY



Li-Ion

CK



## OPERATING & CHARGING PROCEDURE

- T9427USB operating modes as below:
  - Press the power button once, top light turns on.
  - Press the power button again, main light turns on in full power mode.
  - Press the power button once more, main light switches to ECO mode.
  - Press the power button once more, all lights off.
- Switch off all lights and connect the USB charger during charging.
- The battery indicator will turn red while charging.
- The battery indicator will turn green once device is fully charged.
- If the battery indicator does not light up, please remove the cable and try again.
- Only use the recommended cable to charge the device. The use of a non-recommended charger can lead to a fire and destroy the device.
- Before using the device for the first time - ensure it has been charged for 4 - 5 hours.
- Fully charge the device before it is stored for a longer period of time.

## WARNING!

- Do not open the device.
- Do not look directly into the light emitting lamp - risk of eye injuries.
- Do not operate in direct sunlight or extreme temperature conditions.
- Operating temperature, -10°C to +40°C.
- Keep away from children! Children should be supervised so that they do not play with the device.

TECHNICAL DATA	
Light Source	High Power COB LED - Main Light High Power SMD LED - Top Light
Lumens	Approx. 400lm - Main Light Full Power Approx. 250lm - Main Light ECO Mode Approx. 100lm - Top Light
Operating Time	Approx. 3.5h - Main Light Full Power Approx. 5h - Main Light ECO Mode Approx. 10h - Top Light
Battery Specification	Li-Ion 3.7 V, 2600 mAh, 9.62 W h
Charging Time	Approx. 3.5h
Charging Input	DC 5V 1A
Protection Rating	IP54, IK 07
Operating Temperature	-10 °C to +40°C

## SAFETY INSTRUCTIONS

- Do not use the device if there is damage to the housing, plug or cable. Consult your local authorized specialist.
- Do not open the device! Repair work and replacing the rechargeable battery pack may only be carried out by electricians.
- Carry out cleaning tasks only when the mains plug is removed from the mains power.
- There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons. Please contact your nearest authorized branch.
- Protect the battery against heat, e. g. against continuous intense sunlight, fire, water, and moisture. Danger of explosion.
- If the battery is damaged or not used correctly, fluids can leak from the battery. Avoid contact with these. Leaking battery fluids can lead to skin irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes, make sure you seek medical help.

## ENVIRONMENTAL PROTECTION

- The device should not be discarded with normal household waste under any circumstances.
- Dispose of the device via an authorized disposal center or your communal waste disposal facility. Observe the current applicable regulations. Contact your waste disposal facility if in doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste.
- Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.

## WARRANTY

- The device has a two year WARRANTY against faulty workmanship or materials. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.